

The difference is measurable<sup>®</sup>

# COMPOSITE TEST FIXTURES

Flexural and Interlaminar Shear

Interlaminar shear testing is a simple test on easy to prepare polymer composite specimens that measures the strength of the bond between fibers and matrix. Another common test for polymer composites is flexure testing. The Instron® Modular Flexural and Interlaminar Shear Strength (ILSS) bend fixture system, with a range of interchangeable anvils, is suitable for testing to a number of international standards, including ASTM D2344, ASTM D790, EN 2562, EN 2563, ISO 14125, and ISO 14130.

# PRINCIPLE OF OPERATION

The base fixture incorporates very low-friction precision guidance to ensure accurate location of the upper anvil(s). It also incorporates specimen stops to ensure repeatable specimen positioning. Changing the anvils is a simple procedure. A graduated scale is provided on the front of the base beam to facilitate positioning of the anvils. For ILSS testing, a central locating pin is provided – this is precisely aligned with the upper anvil. This feature allows user-supplied spacers to be used to easily set accurate lower anvil spans. Alternatively, the optional CP108199 micrometers can be mounted on ILSS lower anvils to allow precise spans setting within 0.1 mm tolerance against the upper anvil.

#### **FEATURES**

- Modular fixture
- Interchangeable anvil sets to meet a rangeof ILSS and Flexural standards
- Specimen stops to ensure repeatable specimen location
- Guided upper anvil to ensure accurate alignment
- · Suitable for non-ambient temperatures
- Anvils for EN2563 complies with the 0.02 mm tolerances specifiedfor centering and parallelism\*
- Accurate lower span setting using spacers or with CP108199

Note: \*Option is available with independent test certificates



4 point Flexural Testing with CP106702 Anvils on Base Fixture



ILSS Testing to ASTM D2344 with CP107574 Anvils on Base Fixture

## ANVIL SPECIFICATIONS

Catalog Number		CP107574 <sup>1, 2</sup>	CP106695 <sup>1, 2</sup>	CP111636 <sup>1, 2</sup>	CP112749 <sup>1, 2</sup>	CP1076661	CP1069481	CP108956 <sup>1,3</sup>	CP1067021
Туре		ILSS	ILSS	ILSS	3 point & ILSS	3 point	3 point	4 point	3 & 4 point
Standards		ASTM D2344	ASTM D2344M	EN 2563	ISO 14125 & EN2746 (Flexural) & ISO 14130 & EN2377 (ILSS)	EN 2562	ASTM D790 & ISO 14125 (Thickness > 3 mm)	ASTM D7264, used with CP111636	Various Max. Upper 4 point Span: 60 mm (2.4 in)
Upper Anvil	mm	6.35	6.0	6.0	10.0	25	10	6.0	6.5
Diameter	in	0.25	-	-	0.4	1.0	0.4	-	0.25
Lower Anvil	mm	3.2	3.0	6.0	4.0	10	10	6.0	6.5
Diameter	in	0.125	-	-	0.16	0.4	0.4	-	0.25
Anvil Width	mm	26	26	26	26	26 26 26 26 2	26		
Allvii Widtii	in	1.0	1.0	1.0	1.0	1.0	1.0	1.0	1.0
<b>Anvil Hardness</b>	HRC	60 - 62	60 - 62	60 - 62	60 - 62	> 48	> 48	60 - 62	> 48


#### Notes:

- 1. Temperature range -70 to +250 °C (-94 to +482 °F)
- 2. Compatible with CP108199 Micrometer option for span setting
- 3. CP111636 required

#### **BASE SPECIFICATIONS**

Catalog Number	-	CP110860		
Maximum Load	kN kgf	10 1,000		
	lbf	2,200		
Maximum Span	mm	210		
	in	8.3		
Maximum Specimen Width	mm	Up to 75		
(Anvil Dependant)	in	3.0		
Temperature Range	°C	-70 to +250		
remperature Range	°F	-94 to +482		
Mechanical Connection				
Upper Interface (Type DM)		1.25 in Connection with ½ in Clevis Pin		
Lower Interface <sup>1</sup>		Compression Platen 100 mm (4 in) Diameter or Larger		
Dimensions	***************************************	•		
Effective Length (A)	mm in	237 ± 20 9.33 ± 0.79		
Width (B)	mm in	235 9.3		
Materials	-	Stainless Steel		
Weight (Approximately)	kg	4 10		

Note: For operation over the full temperature range, -70 to  $250\,^{\circ}$  C (-94 to  $482\,^{\circ}$  F), the micrometers may be removed after the span has been set and locked.

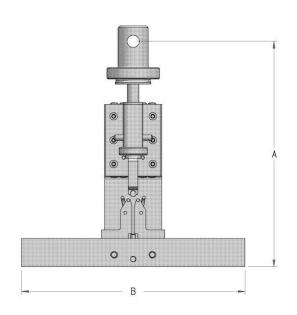

### MICROMETER OPTION

- Catalog Number: CP108199
- Precision span setting for CP110860 bend fixture and ILSS anvils. Provides 2 micrometers to allow the span of the lower anvil to be set with respect to the upper anvil. Micrometers have a range of 0 - 25 mm each with a resolution of 0.01 mm, which allows for accurate spans to be set from the minimum (subject to lower anvils) to 50 mm.
- Compatibility: CP107574, CP106695, CP111636, CP112749
- Temperature Range: 0 to 100 °C (32 to 212 °F)

www.instron.com



Worldwide Headquarters 825 University Ave, Norwood, MA 02062-2643, USA Tel: +1 800 564 8378 or +1 781 575 5000 European Headquarters Coronation Road, High Wycombe, Bucks HP12 3SY, UK Tel: +44 1494 464646